

## 1. SAFETY NOTES

**⚠ Please take the time to read these instructions carefully and keep them to hand in the storage compartment provided on the child safety seat at all times! The instructions must accompany the child seat if it is passed on to a third party!**

**⚠ DANGER! To protect your child:**

- In the event of an accident at a collision speed of more than 10 km/h, the child seat may be damaged without the damage being immediately visible. In this case the child seat must be replaced. Please dispose of it properly.
- Always have your child seat checked if it has been damaged (e.g. by falling to the ground).
- Regularly check all important parts for damage. In particular, ensure that all the mechanical parts are fully functional.
- Never apply oil or grease to any parts of the child seat.
- Never leave your child unattended on the child seat in the vehicle.
- Only allow your child to enter and exit the vehicle on the pavement side.
- Protect the child seat from intense direct sunlight when not in use. The child seat can become very hot in direct sunshine. Children's skin is sensitive and could be harmed as a result.
- The more snugly the belt fits over your child's body, the better the child will be protected. Therefore, avoid having your child wear thick clothes under the belt.
- On long journeys, take regular breaks in order to give your child the chance to run about and play.

**⚠ DANGER! For the safety of all vehicle occupants:**

In the case of an emergency stop or accident, unsecured objects or people may cause injury to other occupants in the vehicle. Therefore, please always ensure that ...

- the backrests of the vehicle seats are locked (e.g. If there is a folding rear seat bench, check that it is latched in place).
- all heavy or sharp-edged objects in the vehicle (e.g. on the parcel shelf) are secured.
- all persons in the vehicle have their seat belts fastened.
- the child seat is secured whenever it is in the vehicle, even if not carrying a child.

**⚠ WARNING! For your protection when handling the child seat:**

- Never use the child safety seat in a free-standing position, even for testing.
- When swivelling the backrest up, (12) nothing must come between the back-rest (12) and the seat cushion(9). You or your child's fingers could be jammed and injured.
- To avoid damage, ensure that the child seat is not jammed in between hard objects (car door, seat rails, etc.).
- Keep the child seat in a safe place when not in use. Do not place heavy objects on the seat and do not store it directly next to sources of heat or in direct sunlight.

**⚠ CAUTION! To protect your vehicle:**

- Certain car seat covers made from more sensitive materials (e.g. velour, leather, etc.) may show signs of wear when a child seat is used on them. For optimum protection of your car seat covers, we recommend using the BRITAX RÖMER car seat protector from our range of accessories.

## 2. INTRODUCTION

We are delighted that you have chosen our child seat to accompany your child safely through a new stage in his or her life.

**To protect your child correctly, the child seat must always be used and installed as described in these instructions!**

**These instructions use the following symbols:**

Symbol	Keyword	Explanation
	<b>DANGER!</b>	Risk of serious physical injury
	<b>WARNING!</b>	Risk of minor physical injury
	<b>CAUTION!</b>	Risk of material damage
	<b>TIP!</b>	Useful notes


Instructions that follow a fixed sequence are numbered.

Example:

1. Press the button...

**Belt guide colours**

For clear differentiation, the two vehicle seat belts are shown in different colours. The diagonal strap (16) is shown in dark red and the lap belt (15) in bright red. The belt guides on the child safety seat follow the same colour scheme.

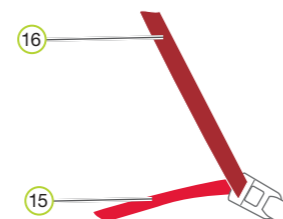

## 3. APPROVAL

BRITAX RÖMER Child seat	Testing and certification In accordance with ECE* R 44/04	
	Group	Body weight
KIDFIX <sup>2</sup> R KIDFIX <sup>2</sup> S	II+III	15 to 36 kg


\*ECE = European Standard for Child Safety Equipment

This child seat has been designed, tested and approved according to the requirements of the European Standard for Child Safety Equipment (ECE R 44/04). The certification mark (letter E in a circle) and approval number can be found on the orange approval label (sticker on the child seat).

**⚠ DANGER!** The certification is invalidated if any modifications are made to the child seat. Only the manufacturer is permitted to make modifications to the child safety seat. The child seat is approved for use both with and without SecureGuard.

**⚠ WARNING!** The KIDFIX<sup>2</sup> R and KIDFIX<sup>2</sup> S must be used exclusively for securing your child in the vehicle. They are in no way suitable for use as a seat or a toy in the home.

**⚠ DANGER!** Never secure your child or the child seat with a 2-point belt. If your child is secured in the child seat with a 2-point belt only, this may cause serious injuries, which could even be fatal.

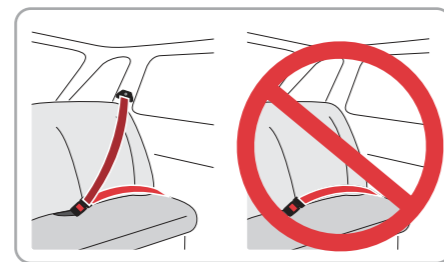

If you have any further questions about the use of the child seat, please contact us:

**BRITAX RÖMER Child Safety EMEA**

www.britax-roemer.com | hello@britax-roemer.com

<b>BRITAX RÖMER</b> Kindersicherheit GmbH Kindersicherheit GmbH Theodor-Heuss-Str. 9 89340 Leipheim Germany +49 (0) 8221 3670 199	<b>BRITAX Excelsior Limited</b> 1 Churchill Way West Andover Hampshire SP10 3UW United Kingdom +44 (0) 1264 386034	<b>BRITAX Nordiska Barn AB</b> Jörgen Kocksgatan 4 SE-211 20 Malmö Sweden
---	---	--

## 4. USE IN THE VEHICLE

**Please refer to your vehicle's instruction manual for instructions on how to use child restraint systems.** The seat can be used in vehicles with ISOFIX anchoring systems (see type list) and in vehicles with 3-point belts.

Please refer to your vehicle's instruction manual for information on the seats approved as child seats for weight class 15 to 36 kg.


The KIDFIX<sup>2</sup> R and KIDFIX<sup>2</sup> S are approved for two different installation methods:

Symbol	Installation type	Approval type
	with the ISOFIT locking arms in the ISOFIX fixing points on the vehicle. Check the list of vehicle types.	semi-universal <sup>a)</sup>
	with the vehicle's 3-point seat belt	universal

<sup>a)</sup>This means that the child seat may be used only in vehicles that are listed in the attached vehicle type list. This type list is constantly being updated. The latest version can be obtained from us or at www.britax-roemer.com

**You can install your child seat as follows:**

in the direction of travel	Yes
against the direction of travel	No <sup>1)</sup>
with 2-point belt	No
with 3-point belt <sup>2)</sup>	Yes
with ISOFIX fixing points (between seat surface and backrest)	Yes
On front passenger seat	Yes <sup>3)</sup>
On outer rear seat	Yes
on centre rear seat (with 3-point belt)	Yes <sup>4)</sup>

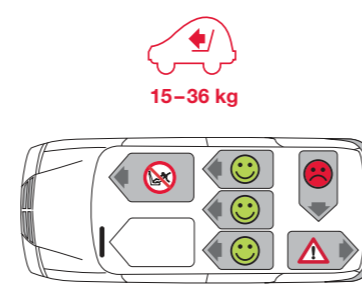

<sup>1)</sup>Use is permitted on a rear-facing vehicle seat (e.g. in a van or minibus) only if the vehicle seat is also approved for use by adults. The seat must not be within the activated range of an airbag.

<sup>2)</sup>The safety belt must be approved to ECE R 16 or a comparable standard (indicated on the belt's test label by an "E" or "e" inside a circle).

<sup>3)</sup>If there is a front airbag: Slide the car seat well back and follow the related instructions in the vehicle's instruction manual.


<sup>4)</sup>Cannot be used if the vehicle seat is equipped with a 2-point belt only.

## 5. ADJUSTING THE HEADREST

A correctly adjusted headrest (22) ensures optimal positioning of the diagonal strap (16), and gives your child optimum protection. The headrest (22) must be positioned so that two fingers can be inserted between your child's shoulders the headrest (22).

**To adjust the height of the headrest to fit your child:**

- Grasp the adjustment handle (10) on the back of the headrest (22) and pull it upwards. This unlocks the headrest.
- You can now move the unlocked headrest (22) to the desired height. When you release the adjustment handle (10), the headrest (22) locks into place.
- Place the child seat on the car seat.
- Sit your child on the child seat and check the height. Repeat the above procedure until the headrest (22) is at the correct height.

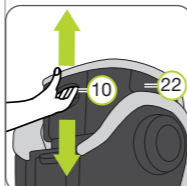

## 6. CARE AND MAINTENANCE

Please ensure that you only use original BRITAX RÖMER replacement seat covers, as the seat cover is an integral part of the child safety seat and fulfils important functions that ensure smooth operation of the system. Replacement seat covers are available from your dealer.

- The cover can be removed and washed with a mild detergent, selecting the "Delicates" programme on the washing machine (30 °C). Please observe the instructions on the washing label of the cover.
- The plastic parts can be cleaned in soapy water. Do not use aggressive cleaning agents (such as solvents).

**⚠ DANGER!** The child safety seat must not be used without the seat cover.

**Removing the seat cover**

- Push the headrest of the vehicle seat to its top position.
- Unhook the cover hook (19) on the rear of the backrest.
- Pull off the top part of the cover and fold it forwards onto the seat surface.
- Release the cover hooks (19) on the front of the backrest and loosen the plastic cards on the front of the seat cushion.
- Pull the cover away from the seat surface.

**Removing the headrest cover**

- Unhook the cover straps (20) on the rear of the backrest.
- Unhook the cover hooks (19) on the front of the backrest.
- Pull the headrest cover (22) off; to do this, detach the two hooks on the bottom of the headrest.

► The cover can now be washed. Please observe the instructions on the washing label of the cover.

**Putting the cover on**

Follow the above steps in the reverse order to put the cover on.

## 7. DISASSEMBLY AND DISPOSAL

**UNFASTENING YOUR CHILD:**

To unfasten your child, press the release button on the car seat buckle.

**REMOVAL:**

- Press the release button on car vehicle seat buckle.
- Open the dark red belt holder (03) by pressing the button on the belt holder (03) backwards, then pull out the diagonal belt (16).

**Only for installation type A (ISOFIT):**

- To release the ISOFIT fitting, squeeze the green locking button (07) and red release button (06) together, first on one side then on the other.
- The child safety seat can now be removed.

**⚠ DANGER!** The child seat must always be secured when in the vehicle, even if not carrying a child.


**RE-ATTACHING THE BACKREST:**

- Follow steps 1 - 7 in paragraph 10.1 "Removing the backrest" in the reverse order.

Please follow the disposal regulations applying in your country.

Disposal of packaging	Container for cardboard boxes
Seat cover	Residual waste, thermal recycling
Plastic parts	To be placed in the corresponding container as labelled
Metal parts	Container for metals
Belt straps	Container for polyester
Buckle and clip	Residual waste

## 8. Remove and install SecureGuard

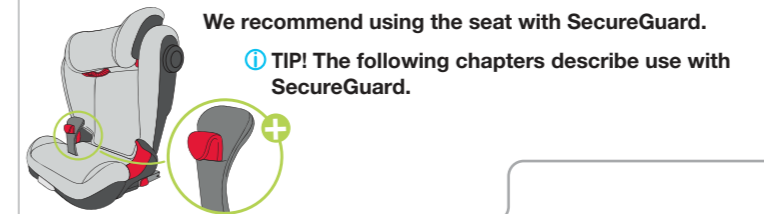

**We recommend using the seat with SecureGuard.**

**TIP!** The following chapters describe use with SecureGuard.

### 8.1 Remove SecureGuard

**Remove the seat cover**

- Fold up the cover of the backrest (12).
- Fold the cover of the seat shell (29) forwards.
- Unhook the cover straps on the seat shell (29).
- Pull the SecureGuard (13) downward and away through the seat cover.
- Remove the plastic cards (30) of the seat cover from the seat shell (29).
- Remove the cover and the seat cushion.

**Remove SecureGuard**

- Press the SecureGuard (13) downward and slide the SecureGuard (13) out of the recess (31).

**TIP!** Keep the SecureGuard (13) for later use.

**Mounting the seat cover**

- Position the seat cover on the seat shell (29).
- Insert the plastic cards (30) of the seat cover into the designated recesses on the seat shell (29).
- Pull the seat cover over the seat shell (29).
- Hook the cover straps back onto the seat shell (29).
- Position the seat cover behind the backrest cover (12).

### 8.2 Installing SecureGuard

**Remove the seat cover**

- Fold up the cover of the backrest (12).
- Fold the cover of the seat shell (29) forwards.
- Unhook the cover straps on the seat shell (29).

- Remove the plastic cards (30) of the seat cover from the seat shell (29).
- Remove the cover and the seat cushion.

**Attaching SecureGuard**

- Take the SecureGuard (13) and position it right in front of the recess (31).
- Slide and press the metal plate (32) into the recess (31) until the plate (32) clicks into place.

**Mounting the seat cover**

- Position the seat cover on the seat shell (29).
- Pull the SecureGuard (13) through the slot in the seat cushion.
- Insert the plastic cards (30) of the seat cover into the designated recesses on the seat shell (29).
- Pull the seat cover over the seat shell (29).
- Hook the cover straps back onto the seat shell (29).
- Position the seat cover behind the backrest cover (12).


15 kg – 36 kg

(-4 Y – 12 Y)

**britax  
römer**

**KIDFIX<sup>2</sup> R  
KIDFIX<sup>2</sup> S**

User instructions

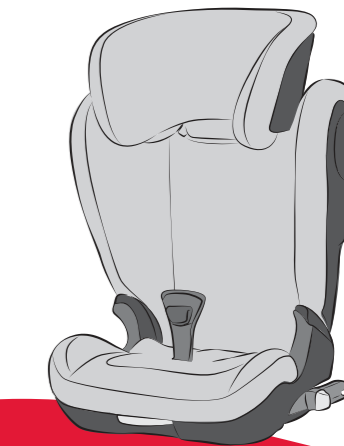



## 9. Installation with backrest

### 9.1 With ISOFIT + BACKREST

The child seat is installed permanently in the vehicle with the ISOFIT locking arms(05). Your child is then buckled into the child seat using the vehicle's 3-point seat belt.




- If your vehicle is not equipped with ISOFIX seat fittings as standard, clamp the two insertion aids (02) supplied with the seat\*, with notch facing upwards, onto the two ISOFIX fixing points (01) in your vehicle.


**TIP!** The ISOFIX fixing points are located between the seat surface and the backrest of the vehicle seat.

\*The insertion aids make it easier to install the child seat with ISOFIX fixing points and prevent damage to the car seat covers. If they are not being used, remove them and keep them in a safe place. For vehicles with a folding backrest, the insertion aids need to be removed before folding the backrest. Any problems that occur are usually caused by dirt or external objects on the insertion aids and on the hook. Remove the dirt or external objects to resolve such problems.

- Push the headrest of the vehicle seat to its top position.
- Follow the steps in Section 5 "ADJUSTING THE HEADREST".

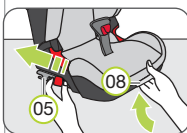

- Hold down the ISOFIT setting button (08) and push the ISOFIT locking arms (05) fully out.

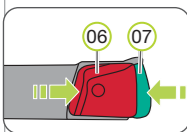

- On either side of the seat, squeeze the green locking button (07) and the red release button (06) together. This ensures that both hooks on the ISOFIT locking arms (05) are open and ready to use.



- Place the child seat facing forward on a car seat approved for this purpose. Check that the backrest (12) is flat against the backrest of the car seat.

- Position the two ISOFIT locking arms (05) directly in front of the two insertion aids (02).

- Push both ISOFIT locking arms (05) into the insertion aids (02) until the ISOFIT locking arms (05) engage on both sides with an audible click.

**DANGER!** The green locking button (07) must be visible on both sides, indicating that the child seat is correctly fastened.



- Hold down the ISOFIT setting button (08) and push the child seat as far back as possible.



- Shake the child seat to check that it is securely fastened, and check the locking buttons (07) again to ensure that they are both fully green.



- Carry out the steps in paragraph 9.3 "SECURING THE CHILD IN A CHILD SEAT WITH BACKREST".

**For the safety of your child, before every car journey check that...**

- the child seat is engaged on both sides with the ISOFIT locking arms (05) in the ISOFIT fixing points (01) and both locking buttons (07) are fully green;
- the lap belt (15) is passed into the bright red belt guides (04) on both sides of the seat cushion;
- the lap belt (15) is passed through the bright red SecureGuard (13);
- the diagonal strap (16) on the vehicle belt buckle side (18) is also passed into the bright red belt guide (04) on the seat cushion;
- the diagonal strap (16) is passed through the dark red belt holder (03) at the headrest;
- the diagonal strap (16) runs diagonally backwards;
- the straps are tight and not twisted;

- the vehicle belt buckle (18) is not placed in the bright red belt guide (04) on the seat cushion.

**DANGER!** If your child tries to open the ISOFIT locking buttons (07) or the vehicle belt buckle (18) or to insert the diagonal strap (16) into the bright red SecureGuard (13), stop your vehicle as soon as possible. Check that the child seat is correctly fastened and that your child is correctly secured. Explain to your child the dangers caused by such actions.

#### UNFASTENING YOUR CHILD AND REMOVAL:

To unfasten your child or to remove the child seat, follow the steps in Section 7 "REMOVAL AND DISPOSAL".

### 9.2 With 3-POINT BELT + BACKREST

Follow the steps in Section 5 "ADJUSTING THE HEADREST".



- Place the child seat on the car seat. Check that the backrest (12) is flat against the backrest of the car seat.

**TIP!** If the headrest of the car seat is preventing this, it should be removed and stowed safely somewhere in the vehicle.

- Carry out the steps in paragraph 9.3 "SECURING THE CHILD IN A CHILD SEAT WITH BACKREST".

**For the safety of your child, before every car journey check that...**

- the child seat is securely fastened,
- the lap belt (15) is passed into the bright red belt guides (04) on both sides of the seat cushion,
- the lap belt (15) is passed through the bright red SecureGuard (13),
- the diagonal strap (16) on the vehicle belt buckle side (18) is also passed into the bright red belt guide (04) on the seat cushion,
- the diagonal strap (16) is passed through the dark red belt holder (03) at the headrest,
- the diagonal strap (16) runs diagonally backwards,
- the straps are tight and not twisted,
- the vehicle belt buckle (18) is not placed in the bright red belt guide (04) on the seat cushion.

**DANGER!** If your child tries to open the vehicle belt buckle (18) or insert the diagonal strap (16) into the bright red SecureGuard (13), stop your vehicle as soon as possible. Check that the child seat is correctly fastened and that your child is correctly secured. Explain to your child the dangers caused by such actions.

#### UNFASTENING YOUR CHILD AND REMOVAL:

To unfasten your child or to remove the child seat, follow the steps in Section 7 "REMOVAL AND DISPOSAL".

### 9.3 SECURING THE CHILD IN A CHILD SEAT WITH BACKREST



- KIDFIX<sup>2</sup> S**  
On the side nearer the vehicle door, turn the SICT (23) anti-clockwise until it is at a distance of 5 mm from the vehicle door or until it is fully unscrewed.

All versions:  
Pull out the vehicle belt and pass it in front of your child to the vehicle belt buckle (18).



**DANGER!** Check that the vehicle belt is not twisted, otherwise the full protective effect of the restraint system is not ensured.

- Engage the belt clip in the vehicle belt buckle (18) so that there is an audible CLICK.



- Insert the diagonal strap (16) and lap belt (15) on the vehicle belt buckle side (18) into the bright red belt guide (04) on the seat cushion.

**DANGER!** The vehicle belt buckle (18) must not be positioned between the bright red belt guide (04) and the armrest.

- Also place the lap belt (15) in the bright red belt guide (04) on the other side of the seat cushion.

**DANGER!** The lap belt (15) must lie as low as possible over your child's hips on both sides.

- Insert the lap belt (15) in the bright red SecureGuard (13).

**DANGER!** Do not pass the diagonal strap (16) into the bright red SecureGuard (13).

- Pass the diagonal strap (16) into the dark red belt holder (03) at the headrest (22) until it is fully inside the belt holder (03) without twisting.

**TIP!** If the backrest (12) is covering the belt holder (03), you can adjust the headrest (22) upwards. The diagonal strap (16) can then be easily inserted. Now move the headrest (22) back to the correct height. Make sure that the button on the belt holder (03) is fully closed.

- Make sure that the diagonal strap (16) is lying over your child's collarbone and not at his or her neck.

**TIP!** You can still also adjust the height of the headrest (22) in the vehicle.

**DANGER!** The diagonal strap (16) must run diagonally backwards. You can adjust the belt routing with the adjustable belt deflector in the vehicle.

**DANGER!** The diagonal strap (16) must never run forward to the belt deflector on the vehicle. In this case, use the child seat on the rear seat only.

- Tighten the vehicle belt by pulling on the diagonal strap (16).

Follow the steps listed in Section 9 "For the safety of your child, before every car journey check that ..."

## 10. USING AS A BOOSTER SEAT

### 10.1 REMOVING THE BACKREST

For age group 3 (22 kg to 36 kg), the child seat can also be used as a booster seat without the backrest. Follow the steps described below for the removal and attachment of the backrest. You will need a TX20 Torx screwdriver. BRITAX RÖMER recommends using it with the backrest as this provides your child with optimum protection in the case of a side impact. If using without the backrest, sufficient side impact protection can be ensured only with side curtain airbags at the seat positions. For information about vehicle equipment options, please contact the manufacturer of your vehicle.

**DANGER!** Use this product as a booster seat only if your child is in age group 3 (22 to 36 kg) and is taller than 125 cm. For all other age groups, the product must be used **with the backrest**. We recommend using the seat with the backrest for as long as possible, and as a booster seat starting from a child height of 135 cm.

- Place the seat on a level surface.
- Open the flap on the storage compartment (25) on the bottom of the booster seat and take out the Torx screwdriver.

- Lift the cover of the backrest (12) and fold it forward.

- Lift the cover of the seat cushion (09) and fold it backward.

- Loosen the 4 Torx screws on the backrest (12).

- Push the seat cushion (09) towards the backrest (12) until the connection snaps out.

- So as not to lose them, screw the 4 screws back into the holes provided in the backrest (12).

- Pull the seat cushion cover (09) back and hook the transparent plastic piece onto the notch provided.

### 10.2 USING THE FLEXIBLE BELT GUIDE

For design reasons in some vehicle models, the diagonal strap (16) may not pass ideally over your child's shoulder area. When using as a booster seat, always check that the diagonal strap (16) is located in the area indicated. If the diagonal strap (16) does not pass through the correct (green) area, the flexible belt guide (24) must also be used.

#### Attaching the flexible belt guide - securing with ISOFIT locking arms

- Open the flap on the storage compartment (25) on the bottom of the seat cushion (09) and take out the flexible belt guide (24).
- Close the flap on the storage compartment (25).

- Pass the metal attachment (26) over the ISOFIX locking arm (27) located on the vehicle belt buckle side.

- Place the belt guide clip (28) of the flexible belt guide (24) on the sitting surface of the seat cushion (09).

- Follow the remaining steps for the installation method 10.3 FASTENING WITH ISOFIT LOCKING ARMS AS A SEAT CUSHION WITHOUT BACKREST

- Attach the belt guide clip (28) to the diagonal strap (16). Check that the belt of the flexible belt guide (24) is not twisted and passes diagonally behind your child.

- Adjust the belt guide clip (28) so that the diagonal strap (16) is located in the green area.

**DANGER!** The diagonal strap (16) must always be in the area indicated.

#### Attaching the flexible belt guide - securing with the vehicle 3-point belt

- Open the flap on the storage compartment (25) on the bottom of the booster seat and take out the flexible belt guide (24).
- Close the flap on the storage compartment (25).

- Engage the metal attachment (26) in the ISOFIX locking arm (27) located on the vehicle belt buckle side.
- Place the belt guide clip (28) of the flexible belt guide (24) on the sitting surface of the booster seat.

- Place the belt guide clip (28) of the flexible belt guide (24) on the sitting surface of the booster seat.
- Follow the remaining steps for the installation method 10.4 FASTENING WITH 3-POINT BELT AS A SEAT CUSHION WITHOUT BACKREST

- Attach the belt guide clip (28) to the diagonal strap (16). Check that the belt of the flexible belt guide (24) is not twisted.

- Adjust the belt in the belt guide clip (28) so that the diagonal strap (16) is located in the green area. If the diagonal strap (16) is not in the green area even with the flexible belt guide (24), the child seat must not be used without the backrest on this seat.

**DANGER!** The diagonal belt must always be located in the area indicated.

### 10.3 FASTENING WITH ISOFIT LOCKING ARMS AS A BOOSTER SEAT WITHOUT BACKREST

The child seat is installed permanently in the vehicle with the ISOFIT locking arms. Your child is then buckled into the child seat with the vehicle's 3-point seat belt.



- If your vehicle is not equipped with ISOFIX seat fittings as standard, clamp the two insertion aids (02) supplied with the seat\*, with notch facing upwards, onto the two ISOFIX fixing points (01) in your vehicle.

**TIP!** The ISOFIX fixing points are located between the seat surface and the backrest of the car seat.

\*The insertion aids make it easier to install the child seat with the ISOFIX fixing points and they prevent damage to the car seat covers. If they are not being used, remove them and keep them in a safe place. For vehicles with a folding backrest, the insertion aids need to be removed before folding the backrest. Any problems that occur are usually caused by dirt or external objects on the insertion aids and on the hook. Remove the dirt or external objects to resolve such problems.

- Hold down the ISOFIT setting button (08) and push the ISOFIT locking arms (05) fully out.

- On both sides of the seat, squeeze the green locking button (07) and the red release button (06) together. This ensures that both hooks on the ISOFIT locking arms (05) are open and ready to use.

- Place the child seat facing forward on a car seat approved for this purpose.
- Position the two ISOFIT locking arms (05) directly in front of the two insertion aids (02).
- Push both ISOFIT locking arms (05) into the insertion aids (02) until the ISOFIT locking arms (05) engage on both sides with an audible click.

**DANGER!** The green locking button (07) must be visible on both sides, indicating that the child seat is correctly fastened.

- Hold down the ISOFIT setting button (08) and push the child seat as far back as possible.

- Shake the child seat to check that it is securely fastened, and check the locking buttons (07) again to ensure that they are both fully green.

- Carry out the steps in paragraph 10.5 "SECURING THE CHILD IN A CHILD SEAT WITHOUT BACKREST".

**For the safety of your child, before every car journey check that...**

- the child seat is engaged on both sides with the ISOFIT locking arms (05) in the ISOFIT fixing points (01) and both locking buttons (07) are fully green,
- the lap belt (15) is passed into the bright red belt guides (04) on both sides of the seat cushion,
- the lap belt (15) is passed through the bright red SecureGuard (13),
- the diagonal strap (16) on the vehicle belt buckle side (18) is also passed

- into the bright red belt guide (04) on the seat cushion,
- the diagonal strap (16) runs diagonally backwards,
- the straps are tight and not twisted,
- the vehicle belt buckle (18) is not placed in the bright red belt guide (04) on the seat cushion.

**DANGER!** If your child tries to open the ISOFIT locking buttons (07) or the vehicle belt buckle (18) or to insert the diagonal strap (16) into the bright red SecureGuard (13), stop your vehicle as soon as possible. Check that the child seat is correctly fastened and that your child is correctly secured. Explain to your child the dangers caused by such actions.

#### UNFASTENING YOUR CHILD AND REMOVAL:

To unfasten your child or to remove the child seat, follow the steps in Section 7 "REMOVAL AND DISPOSAL".

### 10.4 FASTENING WITH 3-POINT BELT AS A SEAT CUSHION WITHOUT BACKREST

The child seat is not installed permanently in the vehicle. It is simply secured along with your child by the vehicle's 3-point seat belt.

- Place the child seat on a suitable vehicle seat. Follow the steps in paragraph 10.5 "SECURING THE CHILD IN A CHILD SEAT WITHOUT BACKREST".

**For the safety of your child, before every car journey check that...**

- the child seat is securely fastened,
- the lap belt (15) is passed into the bright red belt guides (04) on both sides of the seat cushion,
- the lap belt (15) is passed through the bright red SecureGuard (13),
- the diagonal strap (16) on the vehicle belt buckle side (18) is also passed into the bright red belt guide (04) on the seat cushion,
- the diagonal strap (16) runs diagonally backwards,
- the straps are tight and not twisted,
- the vehicle belt buckle (18) is not placed in the bright red belt guide (04) on the seat cushion.

**DANGER!** If your child tries to open the vehicle belt buckle (18) or insert the diagonal strap (16) into the bright red SecureGuard (13), stop your vehicle as soon as possible. Check that the child seat is correctly fastened and that your child is correctly secured. Explain to your child the dangers caused by such actions.

#### UNFASTENING YOUR CHILD AND REMOVAL:

To unfasten your child or to remove the child seat, follow the steps in Section 7 "REMOVAL AND DISPOSAL".

### 10.5 SECURING THE CHILD IN A CHILD SEAT WITHOUT BACKREST

- Sit your child sit in the child seat.
- Pull out the vehicle belt and pass it in front of your child to the vehicle belt buckle (18).

**DANGER!** Check that the vehicle belt is not twisted, otherwise the full protective effect of the restraint system is not ensured.

- Engage the belt clip in the vehicle belt buckle (18) so that there is an audible CLICK.

- Insert the diagonal strap (16) and lap belt (15) on the vehicle belt buckle side (18) into the bright red belt guide (04) on the seat cushion.

**DANGER!** The vehicle belt buckle (18) should not be in the same area as the bright red belt guide (04). The lap belt (15) must lie as low as possible over your child's hips on both sides.

- Insert the lap belt (15) in the bright red SecureGuard (13).

**DANGER!** Do not insert the diagonal strap (16) into the bright red SecureGuard (13).